



ghd duet style

Professional hot air styler

important safety instructions, manufacturer's guarantee and how to register your product

contents

EN Enrich

3-6

Validates your guarantee

11

Important safety instructions

Safety precautions – Read the hot air styler for the safety of both yourself and others. Always read the safety precautions set out below carefully and follow them, without exception, at all times when using your hot air styler. Take care to avoid the risk of hair damage, burns, fire or injury to persons. Read and understand the safety instructions before using the hot air styler. This hot air styler is for use only as a drying and heat styling aid, and only with products specifically designed for use with a heated styling aid such as a hot hair cream.

Handling your hot air styler – Do not touch the hot air styler. Do not use the hot air styler if it has been damaged – for example if the hot air styler casing is cracked, broken or bent. Do not use the hot air styler if the hot air styler is covered under your guarantee. This does not affect your statutory rights.

This appliance can be used by children aged

from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved, by a person responsible for their safety.

Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. When the hot air styler is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hot air styler is switched off.

For additional protection, the installation of a residual current device (RCD) with an operating current not exceeding 30mA is advisable when using this product. Please contact an electrician for further details. BURN HAZARD: Keep appliance out of reach from children, particularly during

use and during cool down after use. When the appliance is connected to a power supply never leave it unattended.

The hot air styler is not suitable for use with synthetic hair. It is possible that colour may permanently transfer onto the hot air styler if used on dyed hair.

warning: keep away from water

Do not use this device in a bathtub, shower, or water filled reservoir.



- 1. Do not store near water**
- 2. Do not immerse or put under running**

water, even for cleaning purposes
3. CAUTION: Never use the ghd hot air styler with wet hands, in, or near water or near baths, basins or other receptacles containing water (or any other liquid)

4. Do not reach for the appliance if it has fallen into water
5. Do not spray or apply wet styling aids directly onto the ghd hot air styler.
6. Do not leave within the reach of children

warning: electricity

As with most electrical appliances, electrical parts are electrically live even when the switch is off.

To reduce the risk of electrocution:

Never operate this appliance if it is not working properly, or if it has a damaged power cord or plug. If the power cord or plug is damaged, it must be replaced by Jemella Ltd.

1. Only use with 230V-240V, 50/60Hz AC power supply.
2. The appliance should never be left unattended when plugged in.
3. Keep the power cord away from heated surfaces. Do not wrap the power cord around the appliance. Do not hang the ghd hot air styler by the power cord.
4. Do not use if the cord is damaged.
5. Do not use if you notice any damage to the power cord or plug. Do not touch the cord unless you are instructed to do so by removing the plug, and then by removing the plug.
6. Always unplug the ghd hot air styler immediately after using.

7. Do not use an extension power cord with this appliance.
8. Do not use a power strip with this appliance.
9. Your ghd product is a class II electrical appliance and should not be connected to an earth connection.
10. Do not use the ghd hot air styler in a bathroom as it can cause an electric shock or fire.



The ghd hot air styler must be unplugged from the mains socket.

1. Before cleaning and maintenance procedures.
2. Before unplugging the appliance.
3. As soon as you have finished using it.
4. If you leave the room, even momentarily.
5. If you are not using the appliance for a long period of time.
6. Your ghd hot air styler can only be repaired using specialist tools and by qualified repair experts at ghd.
7. Do not attempt to repair the appliance with these safety precautions may result in electric shock or other injuries!

warning: hot surfaces

The ghd hot air styler heater plates are hot for reflective styling.
 To reduce the risk of burns:
 1. NEVER touch the hot air styler heater plates.


2. Avoid holding or touching the hot air styler beyond the raised finger guard, the ghd hot air styler handle or the ghd hot air styler on its independent stands such as a ghd styler heat mat.
3. When styling is complete, always switch off the hot air styler and unplug it.
4. Wait for the hot air styler to cool before storing.
5. After styling the plates remain hot – for safe cooling cover the plates with the temporary plates provided.
6. If the power cord is damaged, do not use it.
7. It was first delivered in its packaging. Do not wind it around your hand or the body of the hot air styler as this can lead to early failure of the power cord.
8. Do not use the appliance with the stand, if any, on a non-resistant, stable flat surface.

Your ghd hot air styler is not only attractive to you, but also to your children. Please ensure you always store your ghd styler out of reach of children, particularly during use, especially when cooling.

For safe cooling: cover the plates with the heated plate guard. WARNING: even with the plate guard on, the ghd hot air styler heater plates are still very hot. Do not touch the plates or allow children or pets to touch the plates. Use common sense and your own judgement, experience and knowledge to touch the styler whilst it is cooling.

operation

Ensure that hair is towel dried (not dripping wet) before using the ghd appliance

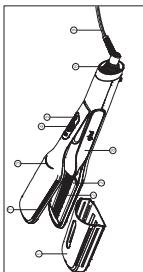

1. Heated plate guard
2. ghd hot air styler heater plates
3. On/Off Switch
4. Shine Shot Button
5. Shine Shot Button
6. Air Inlet

1. Hot Air Outlet
2. ghd hot air styler body
3. Power cord

Ensure that your hair is towel dried before use

1. Plug the ghd hot air styler into a power socket. The ghd hot air styler will momentarily power up and the On/Off switch will illuminate to indicate that it is connected to it. The ghd hot air styler has 2 operating modes:
 - **Shine Shot** for use on dry hair only. This mode uses only the heater plates at a higher temperature to produce a finished style. Air moves slowly
 - **Shine Shot to Drying Mode** press and hold the **shine shot** button for 2 seconds. This mode uses approx. 2 mins. During this time the product will produce a 'beep' sound and the LEDs will pulse as usual. When the plates cool down to the correct temperature the fan will start and the product will give the 'ready to use' tone.

After washing your hair, towel-dry it thoroughly. **Do not use the ghd hot air styler on wet hair or any other source to come into contact with the styler, as wet hair or any other source to come into contact with the styler, could cause the device to go into fail safe mode.**

1. For **Drying Mode**:
 - A. 6 mins on the ghd hot air styler to dry your hair. The fan will gradually ramp up and the fan will gradually ramp up in speed.
 - B. Once ready the ghd hot air styler will play a short 'ready to use' tone.

1. For **Shine Shot**:
 - A. 2 mins on the ghd hot air styler to dry your hair. The fan will gradually ramp up and the fan will gradually ramp up in speed.
 - B. Once ready the ghd hot air styler will play a short 'ready to use' tone and the light will remain illuminated to indicate that it is ready to use.

Moving from **Shine Shot to Drying Mode** press and hold the **shine shot** button for 2 seconds. This mode uses approx. 2 mins. During this time the product will produce a 'beep' sound and the LEDs will pulse as usual. When the plates cool down to the correct temperature the fan will start and the product will give the 'ready to use' tone.

When the product is switched off from drying mode the fan will gently ramp down. This time to allow residual heat out from the heater.

1. For **Shine Shot**:
 - A. 2 mins on the ghd hot air styler to dry your hair. The fan will gradually ramp up and the fan will gradually ramp up in speed.
 - B. Once ready the ghd hot air styler will play a short 'ready to use' tone and the light will remain illuminated to indicate that it is ready to use.

1. The ghd hot air styler has the following safety features:
 - a. If the ghd hot air styler has been left on and has not been used for more than ~27 minutes, a safety feature will automatically turn the ghd hot air styler off. If this occurs repeatedly, please contact your local ghd service centre.
 - b. After 60 mins, a safety feature will automatically turn the ghd hot air styler off, even if it is still in use.
 - c. The ghd hot air styler will play the auto-stand down tone. The heating plates will power down and on again until the start-up tone sounds.
 - d. To re-start the ghd hot air styler while it is in sleep mode, simply slide the power button or air inlet on again until the start-up tone sounds.

Never use the ghd hot air styler as this can cause the cord and plug to overheat and become a fire hazard. Do not use the ghd hot air styler as this can cause the cord and plug to overheat and become a fire hazard. Do not use the ghd hot air styler as this can cause the cord and plug to overheat and become a fire hazard.

Never use the ghd hot air styler as this can cause the cord and plug to overheat and become a fire hazard. Do not use the ghd hot air styler as this can cause the cord and plug to overheat and become a fire hazard.

user maintenance instructions

To ensure that your ghd hot air styler operates at the optimum efficiency, always ensure that the rear filter is kept clean by regularly cleaning it. For more information on how to clean the rear filter, please refer to the user manual. The ghd hot air styler is covered by the manufacturer's guarantee.

1. Unplug the ghd hot air styler from the mains power supply.
2. Wait for 5 seconds and then plug the unit back into the wall.
3. Check the unit back on.
4. If this occurs repeatedly, please contact your local ghd service centre.

For UK plugs: please ensure that the fixed fuse is intact and functioning. If it is not replace it with an identical rated British Standard fuse.

If in doubt or for further advice, please visit the help section of ghd.com or contact an approved ghd stockist or contact ghd Customer Service for further advice.

manufacturer's guarantee

All ghd electrical products are individually tested before leaving the factory. However, in the unlikely event of the product proving defective due to faulty workmanship or materials, ghd will replace the product free of charge within the period of the guarantee. A replacement product assumes the remaining guarantee of the original product or 180 days, whichever is extended, any replacement item becomes your property and the replaced item becomes property of ghd.

1. Switch off the unit
2. Unplug the unit from the plug socket

1. Unplug the ghd hot air styler from the mains power supply.
2. Wait for 5 seconds and then plug the unit back into the wall.
3. Check the unit back on.
4. If this occurs repeatedly, please contact your local ghd service centre.

For UK plugs: please ensure that the fixed fuse is intact and functioning. If it is not replace it with an identical rated British Standard fuse.

If in doubt or for further advice, please visit the help section of ghd.com or contact an approved ghd stockist or contact ghd Customer Service for further advice.

failure to operate

Your ghd styling appliance is a high performance product and if the unit is subjected to large fluctuations in mains power during use, it may go into fail-safe mode to protect the unit from damage. However, in the unlikely event that the unit does not start up again, please refer to the user manual for further advice. If your product stops working and the red fault light flashes, please follow the procedure below:

1. Switch off the unit
2. Unplug the unit from the plug socket



that you include in proof of purchase with any returned product. Therefore please ensure you keep your proof of purchase in a safe place.

This guarantee only applies to genuine ghd products purchased through ghd, other than ghd authorised resellers. It does not cover products purchased from other than ghd personnel or ghd representatives. Note that this guarantee may be invalidated where serial numbers or identification have been erased, damaged or modified. This does not affect your statutory rights.

genuine ghd products purchased from ghd authorised resellers are covered by this guarantee. If you purchase a ghd product from a reseller, please ensure you check the product for any signs of damage or tampering. If you purchase a ghd product from a reseller, please ensure you check the product for any signs of damage or tampering. If you purchase a ghd product from a reseller, please ensure you check the product for any signs of damage or tampering.

genuine ghd products purchased from ghd authorised resellers are covered by this guarantee. If you purchase a ghd product from a reseller, please ensure you check the product for any signs of damage or tampering.

Australia only

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and you also have the right to cancel the contract if the goods do not meet a minimum quality standard. If you have any questions or concerns about your purchase, please contact us.

recycling and disposal

Your ghd electrical product is classified as 'electrical or electronic equipment' and it will not be disposed of with other household or commercial waste at the end of its working life. When your time has run out for your ghd product,

please dispose of it according to your local authority's recycling procedure. For more information contact your local authority.

WEEE only

WEEE (Waste Electrical and Electronic Equipment) is a category of waste which includes electrical and electronic products. Your ghd product should be disposed of in accordance with the WEEE directive (Waste Electrical and Electronic Equipment 2002/96/EC), which ensures that products are recycled using the best available methods. For more information, contact your local authority or the retailer from whom you purchased this product.

compliance

The ghd hair air styler is compliant with BS EN 60335-2-23 and carries CE marking. Other approvals include the UK, Australia/New Zealand and South Africa.



ghdusa.com

Model Number: ST0201

ghd user guide

ghd and ghd+ are registered trade marks of

Jemella Group Limited.

© Jemella Group Limited 2022.

Designed in Cambridge, UK. Made in China.

ghd Australia

ghd Australia: 1300 443 424

Jemella Australia Pty Ltd

PO Box 19516

Concord NSW 1591

Australia

ghd New Zealand

ghd New Zealand: 0800 080 029

Jemella New Zealand Ltd

Private Bag 211030

Lanwood Shire Drive

Auckland 2114

New Zealand

Jemella Ltd

ghd UK

ghd UK: 0945 530 1133

ghd Republic of Ireland: +44 1924 423 400

ghd Ireland

ghd Ireland: +353 1 274 2000

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535

ghd Canada: 1 877 353 3535

ghd Mexico: 01 800 00 00 00

ghd Brazil: 0800 00 00 00

ghd India: 020 2610 2610

ghd Singapore: 65 6342 6342

ghd Hong Kong: 2342 2342

ghd Taiwan: 02 2610 2610

ghd Thailand: 020 2610 2610

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535

ghd Canada: 1 877 353 3535

ghd Mexico: 01 800 00 00 00

ghd Brazil: 0800 00 00 00

ghd India: 020 2610 2610

ghd Singapore: 65 6342 6342

ghd Hong Kong: 2342 2342

ghd Taiwan: 02 2610 2610

ghd Thailand: 020 2610 2610

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535

ghd Canada: 1 877 353 3535

ghd Mexico: 01 800 00 00 00

ghd Brazil: 0800 00 00 00

ghd India: 020 2610 2610

ghd Singapore: 65 6342 6342

ghd Hong Kong: 2342 2342

ghd Taiwan: 02 2610 2610

ghd Thailand: 020 2610 2610

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535

ghd Canada: 1 877 353 3535

ghd Mexico: 01 800 00 00 00

ghd Brazil: 0800 00 00 00

ghd India: 020 2610 2610

ghd Singapore: 65 6342 6342

ghd Hong Kong: 2342 2342

ghd Taiwan: 02 2610 2610

ghd Thailand: 020 2610 2610

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535

ghd Canada: 1 877 353 3535

ghd Mexico: 01 800 00 00 00

ghd Brazil: 0800 00 00 00

ghd India: 020 2610 2610

ghd Singapore: 65 6342 6342

ghd Hong Kong: 2342 2342

ghd Taiwan: 02 2610 2610

ghd Thailand: 020 2610 2610

ghd South Africa

ghd South Africa: 086 010 3586

ghd USA: 1 877 353 3535



EN validate your guarantee

For peace of mind styling with your new ghid product, register your guarantee today for:

- Verification of the authenticity of your ghid product
- Replacement should your ghid product fail within the guarantee period*
- Exclusive offers and deals before anyone else
- The latest news and trends first



Visit ghidhair.com/register or use your QR reader on your smartphone to

register your guarantee today. *Conditions apply, see safety manual for details.