

Thank you for having chosen this high quality french press. To get the most enjoyment from this product, please follow the instructions below.

Important safety instructions

Please do not use the french press on the stove, on hotplates, in the microwave or in the oven. Do not allow children to be near the hot french press without supervision.

Do not use force to depress the filter plunger. Do not use the french press any longer if you detect any damages.

Use

Place the french press on a flat and heat resistant surface.

1. Remove the filter plunger.

2. Put coarsely ground coffee into the jug.




Recommendation: Use 1 coffee measure (approx. 7 g) per cup.

3. Add hot, no longer boiling water (approx. 96 °C) and stir the coffee. Do not fill the jug up to the rim, leave about 1-2 cm space for the filter plunger.

4. Place the filter plunger onto the jug and let the coffee steep for approx. 4 minutes.

5. Press the filter plunger straight down using slow, steady pressure. Ensure that the spout is pointing away from you and others.

6. The coffee is now ready to be served.

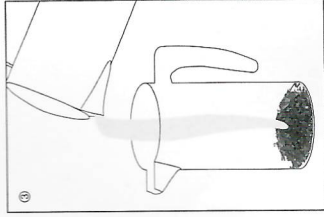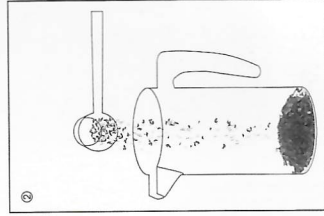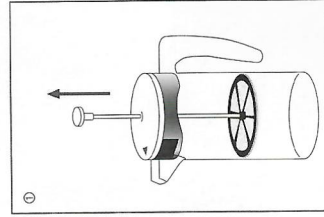

4

Cleaning

- For this model, you can simply remove the glass insert for cleaning. **Attention:** Never try to remove the glass insert by force. **Risk of injury!**
- Unscrew the filter plunger completely.
- All parts can be cleaned in the dishwasher. However, we recommend a cleaning by hand with warm water and some mild detergent.
- Leave all parts to dry completely and screw the filter plunger back together.




Tips and tricks

- Your coffee is best served in pre-heated cups.
- For the french press, use coarsely ground coffee powder.

Warranty

We cover this product with a 5-year warranty from the date of purchase. Excluded from this warranty is damage that can be attributed to normal wear, non-intended use, improper handling, incorrect operation, insufficient care and cleaning, willful destruction, transport or accidents as well as interference from unauthorized persons. Contact your dealer in case of a warranty claim. Warranty claims cannot be processed unless your receipt / invoice is included with the product.

Translations are made in good faith. We do not assume any liability for translation errors. Solely the original German text is binding.

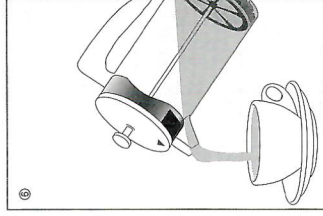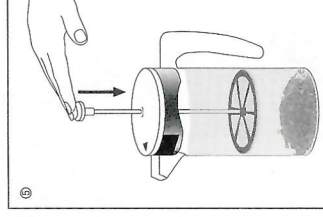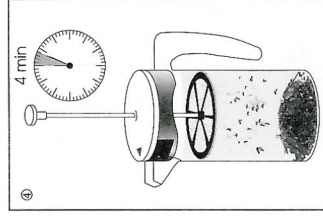

5

cilio

cilio



KAFFEEBEREITER
BEDIENUNGSANLEITUNG
FRENCH PRESS
USER'S GUIDE
CAFETIÈRE À PISTON
MODE D'EMPLOI
CAFFETTIERA A PISTONE
MANUALE D'USO
CAFETERA DE ÉMBOLO
MANUAL DE INSTRUCCIONES
KOFFIEMAKER
GEBRUIKSAANWIJZING

© cilio tisch-accessoires GmbH 07/2020

cilio tisch-accessoires GmbH
Höhscheider Weg 29 · 42699 Solingen · Germany
www.cilio.de

Thank you for having chosen this high quality french press. To get the most enjoyment from this product, please follow the instructions below.

Important safety instructions

Please do not use the french press on the stove, on hotplates, in the microwave or in the oven. Do not allow children to be near the hot french press without supervision. Do not use force to depress the filter plunger. Do not use the french press any longer if you detect any damages.

Use

Place the french press on a flat and heat resistant surface.

1. Remove the filter plunger.




2. Put coarsely ground coffee into the jug.
Recommendation: Use 1 coffee measure (approx. 7 g) per cup.

3. Add hot, no longer boiling water (approx. 96°C) and stir the coffee. Do not fill the jug up to the rim, leave about 1-2 cm space for the filter plunger.

4. Place the filter plunger onto the jug and let the coffee steep for approx. 4 minutes.

5. Press the filter plunger straight down using slow, steady pressure. Ensure that the spout is pointing away from you and others.

6. The coffee is now ready to be served.

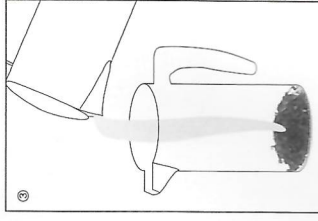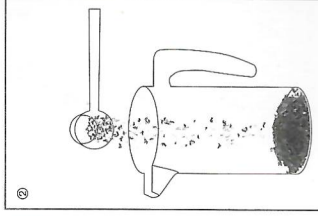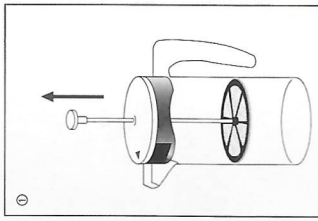

Cleaning

- For this model, you can simply remove the glass insert for cleaning. **Attention:** Never try to remove the glass insert by force. **Risk of injury!**
- Unscrew the filter plunger completely.
- All parts can be cleaned in the dishwasher. However, we recommend a cleaning by hand with warm water and some mild detergent.
- Leave all parts to dry completely and screw the filter plunger back together.

 
 
 
Tips and tricks

- Your coffee is best served in pre-heated cups.
- For the french press, use coarsely ground coffee powder.

Warranty

We cover this product with a 5-year warranty from the date of purchase. Excluded from this warranty is damage that can be attributed to normal wear, non-intended use, improper handling, incorrect operation, insufficient care and cleaning, willful destruction, transport or accidents as well as interference from unauthorized persons. Contact your dealer in case of a warranty claim. Warranty claims cannot be processed unless your receipt/invoice is included with the product.

Translations are made in good faith. We do not assume any liability for translation errors. Solely the original German text is binding.

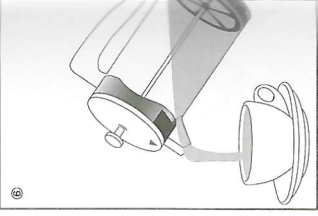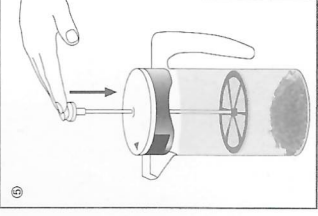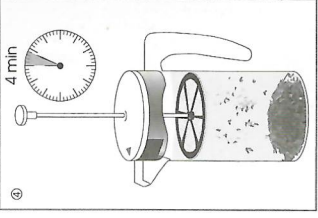

cilio

cilio



KAFFEEBEREITER
BEDIENUNGSANLEITUNG
FRENCH PRESS
USER'S GUIDE
CAFETIÈRE À PISTON
MODE D'EMPLOI
CAFFETTIERA A PISTONE
MANUALE D'USO
CAFETERA DE ÉMBOLO
MANUAL DE INSTRUCCIONES
KOFFIEMAKER
GEBRUIKSAANWIJZING

© cilio Tisch-accessoires GmbH 07/2020

cilio Tisch-accessoires GmbH
Höhscheider Weg 29 · 42699 Solingen · Germany
www.cilio.de